

LOADCELL K - 10 to 3000kg

FOR COMPRESSION AND TENSION LOADS


The load cells are the load sensors in S-E-G weighing systems. They are installed as support points for objects to be weighed and senses their weight. The elasticity of the load cell when subjected to a load is measured with strain gauges which transform the load-induced deflection into a proportional electric signal.

Type K load cells are beam cells whose ends are attached in such a way that the measured load acts perpencicular to the beams longitudinal axis. The beam has three transverse through holes. There are two mounting holes at one end. The other end has a single hole for rigid or compliant load connection.

The load cells are characterized by insensitivity within wide limits to disturbing lateral loads from all directions perpendicular to the measured load and to lateral displacements of the measured load's point of action (eccentric loads).

Type K load cells are designed for use in industrial environments and are available in stainless steel. An elastic load equalizer and other mounting accessories allow simple installation to the load carrier. The mounting accessories are described overleaf.

Load cells are available in an explosion-proof version (with the additional EEx designation) Class: EEx ia IIC T4 -10 - +40 by CENELEC standard. Approved by KEMA no.Ex-94.C.7485



TYPE CLASS TERMINAL RESISTANCE - RATED LOAD

The code units are taken from the table below.

Load cells are identified by a 2-unit code:

Loadcells up to 1000kg are delivered with 3m cable. Loadcell 3000kg is delivered with 7m cable.

Code example:

KN4-350. A load cell type K, class 0,2, with a terminal resistance of 430 ohms, a load rating of 350 kg with 3 m cable.

| CLASS - max errors as a % of load rating, calibration tolerance not inc | 0,2 | 0,1 | 0,05 | | | | | |
|---|----------|-----|------|-------------|-------|--|--|--|
| Туре | | | K | K | K | | | |
| Class designation (S = Stainless steel) | | | N(S) | P(S) | U(S) | | | |
| Resistance (4 = 430 ohms) | | 4 | 4 | 4 | | | | |
| DESIGNATION | 10 | kg | • | | | | | |
| | 15 | _ | • | | | | | |
| | 35 | | • | • | | | | |
| Rated load - designated RL below | 100 | | • | • | • | | | |
| - | 200 | | • | • | • | | | |
| | 350 | | • | • | • | | | |
| | 1000 | | • | • | • | | | |
| | 3000 | | • | • | • | | | |
| SPECIFICATIONS - max.values for class and rated load respectively | | | | | | | | |
| Continuos overload | % | | | 60 | | | | |
| Brief, temporarily overload - elicits no permanent change | % | | | 100 | | | | |
| Overload, ultimate level | % | | | 300 | | | | |
| Mechanical deflection at RL | mm | | | approx: 0,2 | | | | |
| Lateral load relative to RL (may alter the output voltage +/- 0,5% of F | RL) % | | | 100 | | | | |
| Lateral load relative to RL, ultimate level | % | | | 300 | | | | |
| Calibration tolerance relative to Actual load | ±% | | 0,25 | 0,2 | 0,1 | | | |
| Eccentric load effect on sensitivity, relative to Actual load | ± /10mm | | 0,25 | 0,1 | 0,1 | | | |
| Sum of non-linearity, hysteresis and creep errors (30 min.) relative to R | L ±% | | 0,15 | 0,1 | 0,03 | | | |
| Repeatability errors relative to RL | ± % | | 0,05 | 0,03 | 0,02 | | | |
| Temperature effect on zero balance relative to RL | ± %/10°C | | 0,1 | 0,05 | 0,03 | | | |
| Temperature effect on output voltage relative to actual load *) | ± %/10°C | | 0,1 | 0,04 | 0,014 | | | |
| Operating temperature | °C | | 70 | 70 | 50 | | | |
| SPECIFICATIONS SHAPED BY ALL CLASSES AND LOAD PATING | e | | | | | | | |

SPECIFICATIONS SHARED BY ALL CLASSES AND LOAD RATINGS

The rated load elicits a 1mV output per input volt. Zero unbalance (bias): +/- 0,01 mV/V. Recommended input voltage: 15V. Max input voltage: 21V.

The temperature dependence is compensated within the range -10 to +50°C.

Enclosure class: IEC IP 67 (SEN S55). Tested and approved by the swedish Testing institute (SP)

*) Specifications are independent of resistances in the connecting cords for input voltage.


0219

S-E-G INSTRUMENT AB

VAT: SE556186188001




DIMENSIONS and **WEIGHT**

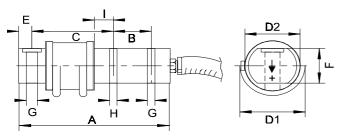


| | Measurements in mm | | | | | | | | | | |
|--|--------------------|----|-----|----|----|----|----|-----|-----|----|-----------|
| Type | Α | В | С | D1 | D2 | Ε | F | G | Н | I | Weight kg |
| K-10 K-15 K-35 K-100 K-200 | 150 | 50 | 80 | 70 | - | 10 | 36 | 9,5 | 9,5 | 10 | 2,1 |
| K-350 K-1000 | 190 | 60 | 85 | 70 | - | 17 | 44 | 14 | 14 | 13 | 2,5 |
| K-3000 | 270 | 90 | 125 | - | 82 | 30 | 64 | 24 | 22 | 23 | 7,2 |

CONNECTIONS

Markings




Load cell cable end connection:




Terminal box type A-1

Terminal box with 4m cable: A-1-14

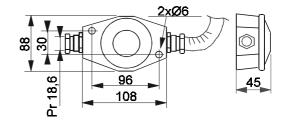

MOUNTING ACCESSORIES


Type KS fastening screws



| Standard Type | Stainless Type | For Loadcell | L mm | M mm | Tight. Torque with oiled thread Nm | Weight kg/pair |
|------------------|-------------------|--------------------------------|---------|---------|------------------------------------|-------------------|
| KS-0S | KS-0S-SS | K-10/15/35/100/200 w. plate KM | 50 | 8 | 20 | 0,05 |
| KS-0L | KS-0L-SS | K-10/15/35/100/200 w. ring KR | 70 | 8 | 20 | 0,06 |
| KS-1S | KS-1S-SS | K-350/1000 w. plate KM | 60 | 12 | 68 | 0,15 |
| KS-1L | KS-1L-SS | K-350/1000 w. ring KR | 75 | 12 | 68 | 0,16 |
| KS-3S | KS-3S-SS | K-3000 w. plate KM | 90 | 20 | 323 | 0,6 |
| KS.3L | KS-3L-SS | K-3000 w. ring KR | 110 | 20 | 323 | 0.7 |


Type KR spacer ring





| Standard | Stainless | | Meas | Weight | | |
|----------|-----------|--------------------|------|--------|----|---------|
| Type | Type | For load cells | N | Р | Q | kg/pair |
| KR-0 | KR-0-SS | K-10/15/35/100/200 | 19 | 8,5 | 20 | 0,1 |
| KR-1 | KR-1-SS | K-350/1000 | 16 | 14 | 26 | 0,1 |
| KR-3 | KR-3-SS | K-3000 | 26 | 22 | 40 | 0,4 |


Type KT elastic load equalizer

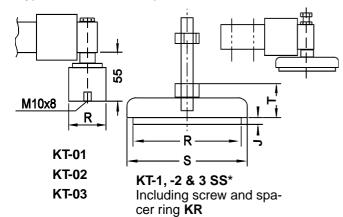

| | | N | Weight | | | |
|---------|----------------|----|--------|-----|----|------|
| Type | For load cells | J | R | S | Т | kg |
| KT-01 | K-35 | - | 50 | - | - | 0,25 |
| KT-02 | K-100 | - | 50 | - | - | 0,25 |
| KT-03 | K-200 | - | 60 | - | - | 0,30 |
| KT-1SS | K-350 | 11 | 90 | 98 | 42 | 0,6 |
| KT-2SS | K-1000 | 11 | 90 | 98 | 42 | 0,6 |
| KT-3A | K-3000 | 2 | 109 | 119 | 43 | 1,5 |
| KT-3ASS | K-3000 | 2 | 109 | 119 | 43 | 1,5 |

^{*)} Load equalizer in SIS2333 is designated "SS"

Type KM mounting plate with jig

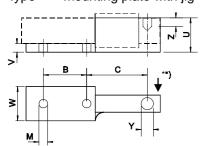

| | | Measurements in mm | | | | | | | Weight | |
|------|--------------------|--------------------|-----|----|----|----|----|------|--------|-----|
| Type | For load cells | В | С | М | U | V | W | Υ | Z | kg |
| KM-0 | K-10/15/35/100/200 | 50 | 80 | 8 | 55 | 20 | 50 | 9 | 15 | 1,2 |
| KM-1 | K-350/1000 | 60 | 85 | 12 | 60 | 15 | 50 | 12,5 | 20 | 1,3 |
| KM-3 | K-3000 | 90 | 125 | 20 | 90 | 25 | 70 | 20 | 30 | 4,5 |

^{**)} The distance block is to be struck away when the mounting plate has been welded in position. See mounting instruction S31-16.